

## Cinderella Electric Violin Sound Guide

### Set Up and Powering On

1. Connect Pedal Board to Amp: The pedal board should be plugged in. Ensure that the cord that is connected to the amp connects to the left output pictured here.



2. Turn On Pedal Board: The quarter inch cable that connects to your instrument also connects to the pedal board where it says Guitar Input. Then connect this to your instrument.




3. Power On Amp: Flip the switch and you should be on. Sometimes this doesn't work which means that one of the cables or plug in has been messed with.



Setting your Sound

1. Use Preamp to set your clean instrument tone-I have to offset the bass more because of the 5 string instrument.

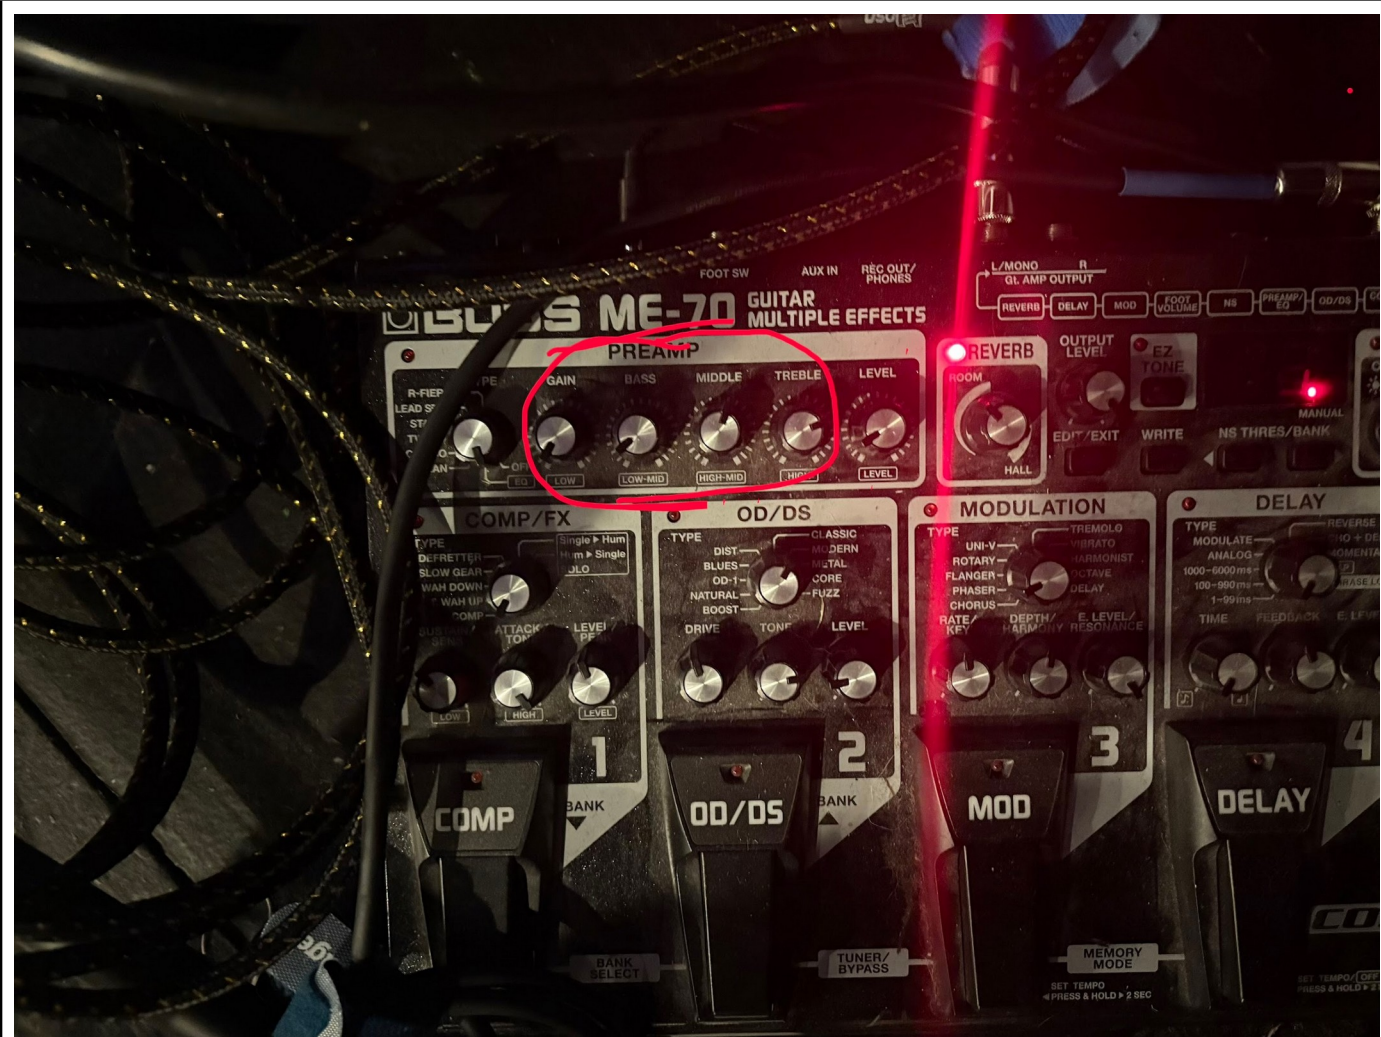

2. Tap Pedal 2 to turn on OD/DS-set your distortion sound for Act 1. This is a more of a guitar solo so the level is higher and you might adjust distortion more. This is my Act 1 Setting-you would ask the pit to soundcheck the finale. Pictured is one Act 1



3. You will also have a second distortion setting for Act 2-This is less intense so you may decrease drive, level. The photos in step one is an example of my settings during a show.

4. You should not have to do anything to


<p>sound check for pedal 3-phaser. You can try it out for funsies though.</p>	
---	--

Setting Levels in Sound Check

<p>1. Initial levels with winds (flute and clarinet). Keep the volume pedal parallel to the floor and adjust level using the level knob in the preamp section. Depending on your instrument's volume, you may need to turn the amp down.</p>	
<p>2. Soundcheck the ACT I Finale with drums and Sax's-adjust level using pedal 2 effect level indicator and volume pedal.</p>	
<p>3. Soundcheck ACT II with Sax's and Acoustic-adjust this using preamp level knob. For me it is moving the level from the 8 pm position which is the usual level to the 10 pm position.</p>	
<p>4. Soundcheck ACT II with Winds and distortion for 22 Do I Love You-it is a tough balance of getting the effect but also volume. When it isn't going well, I switch back to acoustic sounds</p>	

Pedals in Use


Pedal 2

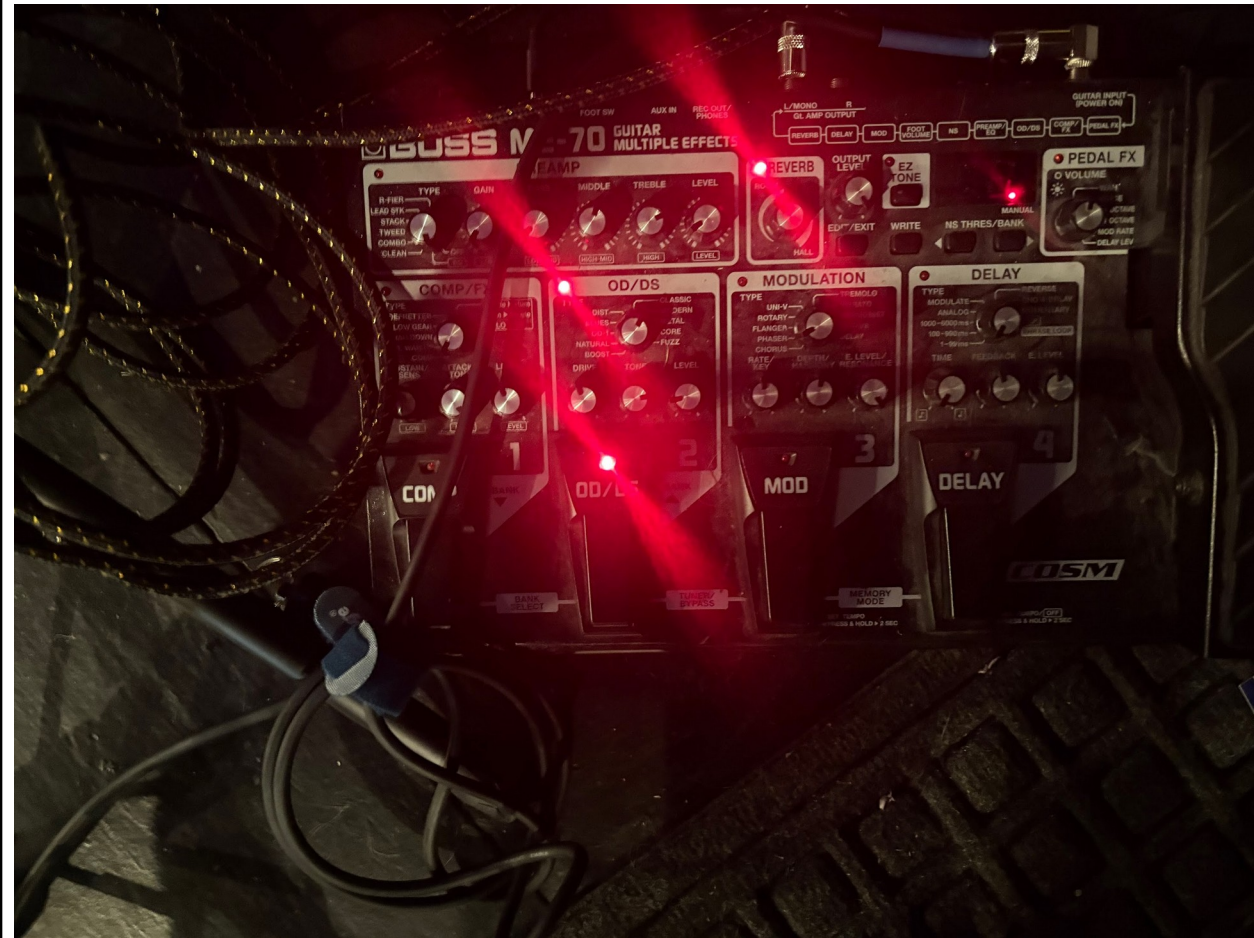

Pedal 3-Note that if you press this at the same time as pedal four it turns on a memory bank feature which is very chaotic. To turn this off, you just press 3 and 4 at the same time.



Volume Pedal-This also doubles as an effects pedal. This feature turns on if you press heavily all the way down and the light turns on next to pedal fx. You can turn this off by pressing hard down and it returns to a volume pedal.

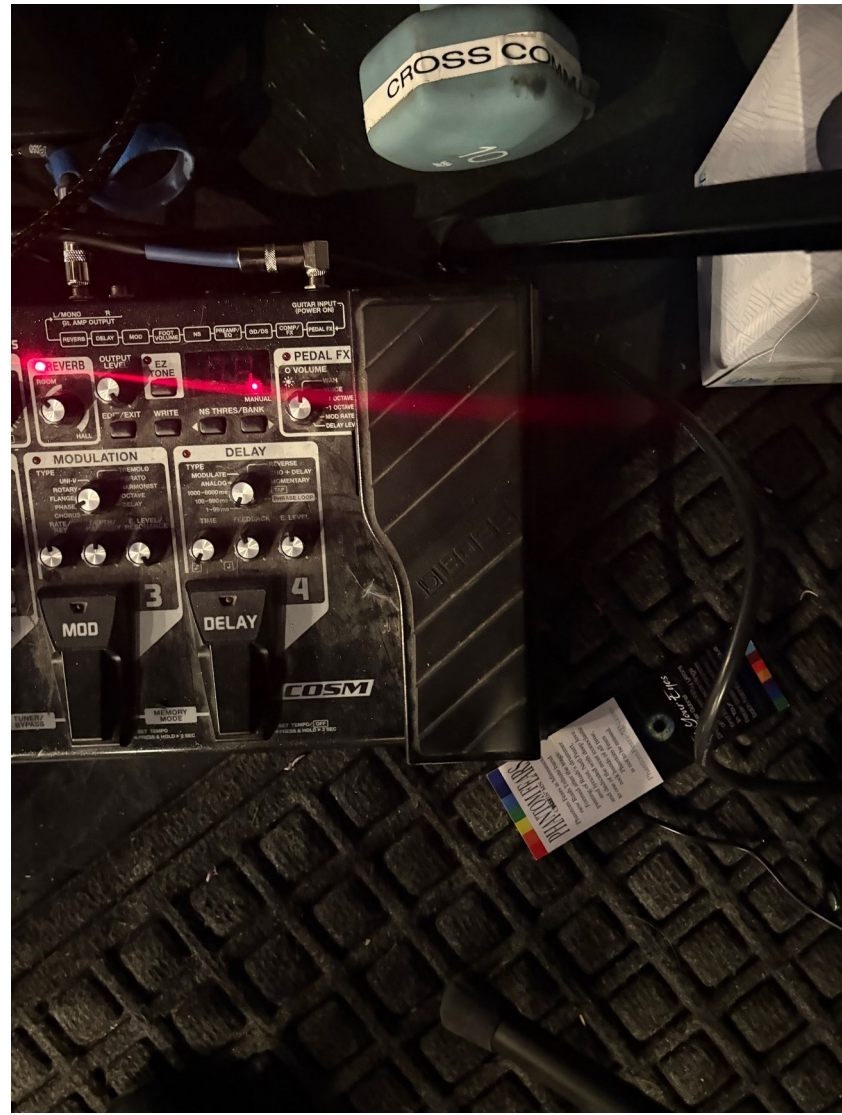

Powering Off

1. Flip Switch on Amp.	
2. Unplug Instrument and Pedal Board Power Cord	
3. Ask Mandie for a Cookie	